



GEMS Receivers Tell You What Your Sensors Already Know

GEMS Receivers house a numerical digital readout, and all of the calibration adjustments for a complete Continuous Level Indication system. Those receivers designed for the XM-Series transmitters also include a power supply for the transmitter.

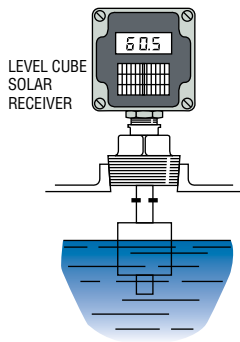

Level Cube with 1/2" NPT shown mounted directly on GEMS XM-Series Transmitter. Or, they may be mounted remotely, up to 100 feet from the transmitter.

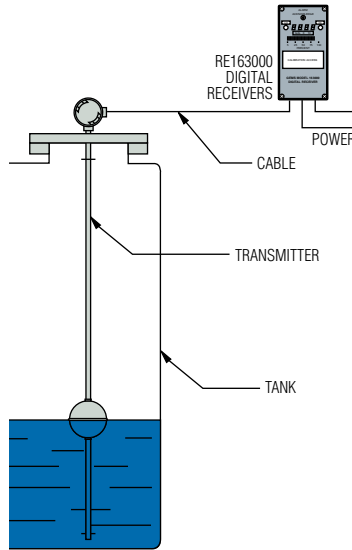

LEVEL INDICATORS – VISUAL

3-Digit Level Cube Receivers



Digital Bargraph Receivers



These units feature a large 4-digit display and bright LED bargraph to visually clarify relative tank content level.

Selector Guide

The Selector Guide below lists standard GEMS Receivers and the transmitter series with which they are normally configured. GEMS doesn't stop, however, with the standard designs shown in this catalog. Our experienced engineering staff will custom design receivers to suit your application. Don't hesitate to contact us about your special requirements.

Receivers	Mounting*	Alarm	Operating Voltage	Compatible GEMS Products
3-Digit Level Cube Receivers	Wall or Transmitter	None	9V Battery, 9 VDC / 117 VAC, Solar	XM-Series (1/4" or 1/2" Resolution), and SureSite Transmitters
RE163000	Panel or Wall	2 Alarm	90-120 VAC, 20-50 VDC	All Continuous Transmitters, SureSite Transmitters, Pressure Transmitters

*Mounting Definitions:
 Wall: Mounted **onto** a surface; i.e., wall, bulkhead, deck, etc.
 Panel: Mounted **into**, and approximately flush with, a surface through a cutout.
 Transmitter: Mounted directly to the top of the transmitter.