

Operating Instructions
for
Low Volume Rotating Vane
Flow Meter

Model: DPL-1P...
DPL-1V...
DPL-1E...



1. Contents

1. Contents.....	2
2. Note	3
3. Instrument Inspection.....	3
4. Regulation Use.....	3
5. Operating Principle.....	4
6. Mechanical Connection.....	4
6.1. Check of operating conditions.....	4
6.2. Mounting	4
7. Electrical Connection	5
7.1. General.....	5
7.2. DPL...0000 (frequency output, OEM without cable).....	5
7.3. Evaluating electronic: Frequency output.....	6
7.4. Evaluating electronic: Analogue output (..L..)	6
7.5. Compact electronics: (..C30R, ..C30M, ..C34P, ..C34N)	6
7.6. Evaluating electronic: Pointer Indication (..Z300, ..Z340).....	7
8. Commissioning – Evaluating Electronic	7
8.1. Frequency output.....	7
8.2. Analogue output.....	7
8.3. Compact electronics	7
8.4. Pointer indication	7
9. Maintenance	8
10. Technical Information.....	8
10.1. Sensor data	8
10.2. Evaluating electronic.....	8
11. Order Codes	10
12. Dimensions	11
13. Declaration of Conformance	12

Manufactured and sold by:

Kobold Messring GmbH
Nordring 22-24
D-65719 Hofheim
Tel.: +49(0)6192-2990
Fax: +49(0)6192-23398
E-Mail: info.de@kobold.com
Internet: www.kobold.com

2. Note

Please read these operating instructions before unpacking and putting the unit into operation. Follow the instructions precisely as described herein.

The devices are only to be used, maintained and serviced by persons familiar with these operating instructions and in accordance with local regulations applying to Health & Safety and prevention of accidents.

When used in machines, the measuring unit should be used only when the machines fulfil the EWG-machine guidelines.

PED 97/23/EG

In acc. with Article 3 Paragraph (3), "Sound Engineering Practice", of the PED 97/23/EC no CE mark.

Diagram 8, Pipe, Group 1 dangerous fluids

3. Instrument Inspection

Instruments are inspected before shipping and sent out in perfect condition.

Should damage to a device be visible, we recommend a thorough inspection of the delivery packaging. In case of damage, please inform your parcel service / forwarding agent immediately, since they are responsible for damages during transit.

Scope of delivery:

The standard delivery includes:

- Low Volume Rotating Vane Flow Meter model: DPL
- Operating Instructions

4. Regulation Use

Any use of the DPL which exceeds the manufacturers specification may invalidate its warranty. Therefore any resulting damage is not the responsibility of the manufacturer. The user assumes all risk for such usage.

5. Operating Principle

The KOBOLD flow meters model DPL are used to measure and monitor liquids. Its compact design allows it to be used in equipment where only small space is available. The large number of evaluating electronics offered means that the system is suited for a wide range of applications.

The medium flows through a specially shaped flow housing and causes a vane to rotate. This rotary motion is sensed by optoelectronics in a non-contacting manner, and converted to an asymmetric frequency signal or an analogue signal. A frequency divider with symmetrical output is available as an option. The frequency is proportional to the flow velocity. The vane has a sapphire-bearing and ensures a high degree of linearity and long service life.

6. Mechanical Connection

6.1. Check of operating conditions

- flow rate
- maximum operating pressure
- maximum operating temperature



Note! Exceeding the measuring range can cause damage to the axle bearings, resulting in significant errors in measurement.

6.2. Mounting

- Flow in direction of the arrow (universal positioning).
- Avoid high pressure or tensile/torsion loads on the connection joints.
Fasten inlet and outlet pipe mechanically at a distance of approx. 50 mm from the connection joint.
- Check the connections for leaks.
- We recommend a minimum inlet straight run of 5xDN and a minimum outlet straight run of 2xDN.

7. Electrical Connection

7.1. General




Attention! Make sure that the voltage values of your system correspond with the voltage values of the measuring unit.

- Make sure that the supply wires are de-energised before making any connections.




Attention! Incorrect wiring will lead to damage of the unit's electronics.

7.2. DPL...0000 (frequency output, OEM without cable)

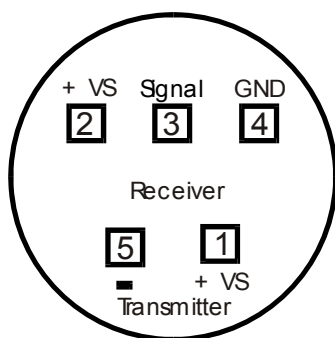

Feed voltage receiver	4,5 ... 16 V _{DC}
Feed current receiver	typ. 7 mA
Signal amplitude High	approx. operating voltage
Signal amplitude Low	0,2 V
Reverse voltage Sender	3,0 V max.
Feed current Sender	8 mA - 12 mA
Output dissipation (power)	2,5 mW max.

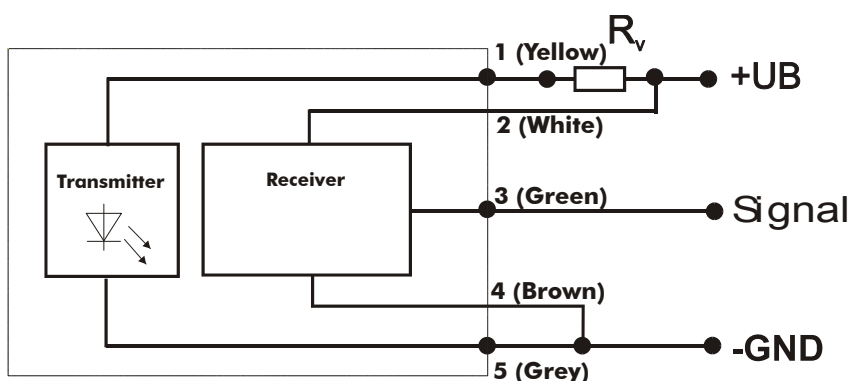


V _S	R _V *
5 V	470 Ω / 0,25 W
8 V	820 Ω / 0,25 W
12 V	1300 Ω / 0,25 W

*Not included in delivery

7.3. Evaluating electronic: Frequency output

Plug connection M12x1 (...F3..)

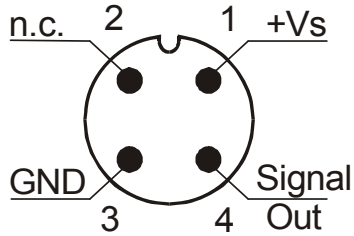


Cable connection (...F5..)


brown: +Vs
 blue: GND
 black: Signal

7.4. Evaluating electronic: Analogue output (..L..)

3-wire, connector M12x1
 (DPL-..L303,..L343)

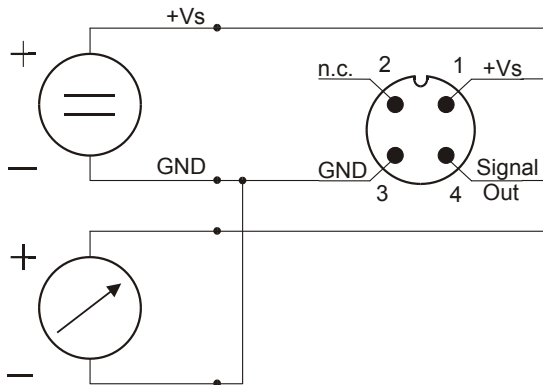


3-wire, DIN-plug 43650
 (DPL-...L403;...L443)

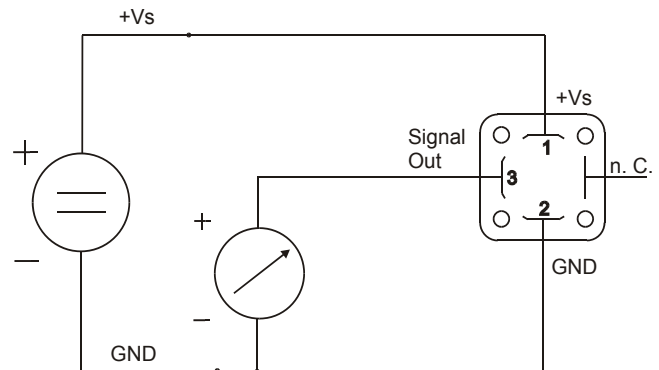

7.5. Compact electronics: (..C30R, ..C30M, ..C34P, ..C34N)

See Operating Instructions Completion for compact electronics with frequency output
 Model: ..C30R,..C30M,...C34P,...C34N

7.6. Evaluating electronic: Pointer Indication (..Z300, ..Z340)

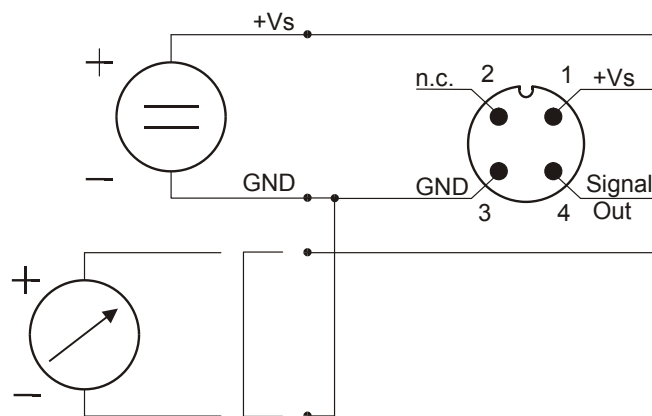

Caution! In case current output is not needed, PIN 4 (Signal Out) is to be permanently connected with Ground (GND) (short circuit jumper).

8. Commissioning – Evaluating Electronic

8.1. Frequency output

The measuring instruments are preset and after connection ready for operation.

8.2. Analogue output

The measuring instruments are preset and after connection ready for operation.

8.3. Compact electronics

The measuring instruments are preset and after connection ready for operation. (In order to change settings see the operating instructions for the compact electronics model: ..C30R, ..C30M, ..C34P, ..C34N)

8.4. Pointer indication

The measuring instruments are preset and after connection ready for operation.

9. Maintenance

As long as the measured medium is clean, the instrument is maintenance-free. In order to avoid problems, we recommend the installation of a filter, e.g. the magnetic filter, model MFR.

If cleaning of the sensor is necessary, the sensor can be opened, so that the inner parts are accessible. Take care that the sensor and especially the vane are not damaged; make sure that the mounting position and the mounting direction of the vane is correct. All work on the sensor electronics should be done only by the manufacturer; otherwise, the guarantee will become invalid.

10. Technical Information

10.1. Sensor data

Accuracy:	± 2.5 % f. s. ± 5 % f. s. (OEM version)
Linearity:	± 1 % f.s.
Medium temperature:	- 40...+ 70 °C
Ambient temperature:	- 30...+ 60 °C
Max. operating pressure:	10 bar
Protection type.:	IP 65

Materials

Housing:	polypropylene
Rotating Vane:	polypropylene
Axle/bearing:	sapphire
Vane mount:	polysulfone
Gasket:	NBR, FPM or EPDM

10.2. Evaluating electronic

Frequency output (OEM-model), no CE-mark

Power supply:	4.5 – 12 V _{DC}
Supply current:	approx. 7 mA
Signal amplitude high:	approx. power supply
Signal amplitude low:	≤ 0.2 V
Transmitter cut-off voltage:	3 V max.
Transmitter supply current:	15 mA .. 25 mA
Output loss:	max. 2.5 mW
Electrical connection:	solder pins
Pulse output:	NPN, open collector, max. 10 mA

Frequency output (option frequency divider)

Supply voltage:	24 V _{DC} ± 20%
Supply current:	40 - 50 mA
Signal amplitude high:	approx. power supply
Signal amplitude low:	≤ 0.2 V
Output loss:	max. 2.5 mW
Electrical connection:	plug connector M12x1 (option: 2 m PVC cable)
Division ratio (option):	1...1/128, factory-set
Pulse output:	PNP, open collector, max. 20 mA

Analogue output (option plug-on display)

Power supply:	24 V _{DC} ± 20 %
Output:	0 - 20 mA or 4 - 20 mA, 3-wire technology
Max. load:	500 Ohm
Electrical connection:	plug connector M12x1 or DIN 43 650
Option:	plug-on display (with plug connector DIN 43 650 and output 4-20mA)

Compact electronics

Display:	3-digit LED
Analogue output:	(0)4...20 mA adjustable, max. 500 Ω
Switching outputs:	1 (2) semiconductor PNP or NPN, set at the factory
Contact operation:	N/C / N/O contact programmable
Setting:	via 2 buttons
Power supply:	24 V _{DC} ± 20 %, 3-wire technology, approx. 100 mA
Electrical connection:	plug connector M12x1

Pointer indication with analogue output

Housing:	aluminium (PA6 GF30)
Display:	moving coil instrument, 240° display
Power supply:	24 V _{DC} ± 20%
Output:	0...20 mA or 4...20mA, set at the factory, 3-wire technology
Max. load:	250 Ω
Electrical connection:	plug connector M12x1

11. Order Codes

Order Details (Example: DPL-1P05 G4 0000)

Meas. range [L/min] water	approx. frequency [Hz] at max. value	approx. pressure loss [bar] at max. value	Gasket model			Connection	Electronic analyser
			NBR	FPM	EPDM		
0.025 - 0.5	272	0.77	DPL-1P05	DPL-1V05	DPL-1E05	<p>G4..= G 1/2 male</p> <p>S4..= Hose connector for inner diameter of Hose 12 mm + 14 mm</p>	<p>Frequency output</p> <p>..0000 = Frequency output, NPN, without cable (OEM), no CE ..F300 = Frequency output, plug connector M12x1, PNP ..F320 = Frequency divider 1:2, plug connector M12x1, PNP ..F340 = Frequency divider 1:4, plug connector M12x1, PNP ..F390 = divider 1...¹/128, plug connector M12x1, PNP ..F500 = Frequency output, PNP, 2 m PVC cable ..F520 = Frequency divider, 1:2, 2 m PVC cable, PNP ..F540 = Frequency divider, 1:4, 2 m PVC cable, PNP ..F590 = divider 1...¹/128, 2 m PVC cable, PNP</p> <p>Analogue output</p> <p>..L303 = 0 - 20 mA output, M12x1 plug connector ..L343 = 4 - 20 mA output, M12x1 plug connector ..L403 = 0 - 20 mA output, plug connector DIN 43 650 ..L443 = 4 - 20 mA output, plug connector DIN 43 650</p> <p>Compact electronics*</p> <p>C30R = LED display, 2x open collector, PNP, plug connector M12x1 C30M = LED display, 2x open collector, NPN, plug connector M12x1 C34P = LED display, 4 - 20 mA, 1x open coll., PNP, plug con. M12x1 C34N = LED display, 4 - 20 mA, 1x open coll., NPN, plug con. M12x1</p> <p>Pointer indication*</p> <p>Z300 = 240° pointer indication, 0 - 20 mA, plug connector M12x1 Z340 = 240° pointer indication, 4 - 20 mA, plug connector M12x1</p>
0.05 - 1.8	471	0.77	DPL-1P10	DPL-1V10	DPL-1E10		
0.2 - 6	505	0.70	DPL-1P15	DPL-1V15	DPL-1E15		
0.4 - 12	265	1.0	DPL-1P20	DPL-1V20	DPL-1E20		
1 - 25	399	1.3	DPL-1P25	DPL-1V25	DPL-1E25		

*please specify flow direction in writing


Plug-on display

for model DPL...L443 (with 4 – 20 mA output and plug connector DIN 43650)


Description	Order number
3-digit LED, plug connector DIN 43 650, 3-wire, power supply through analogue output	AUF-3000

12. Dimensions


DPL-...0000

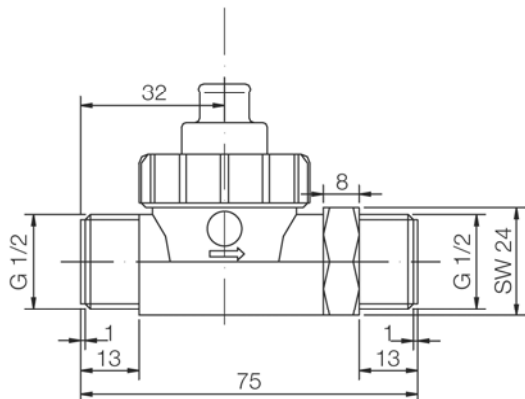


DPL-...F3...: DPL-...L3...

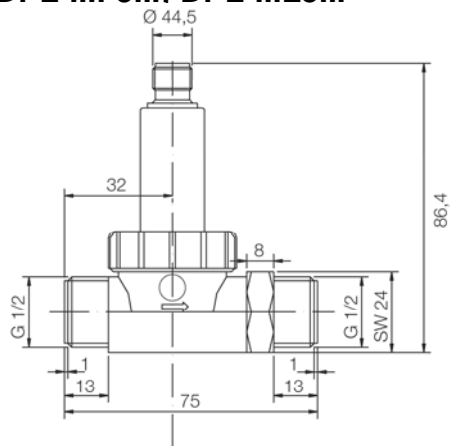


DPL-...C3 with compact electronic

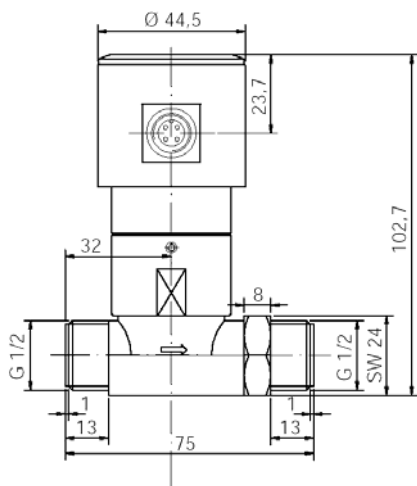

DPL-..L4 with analogue output and plug-on display

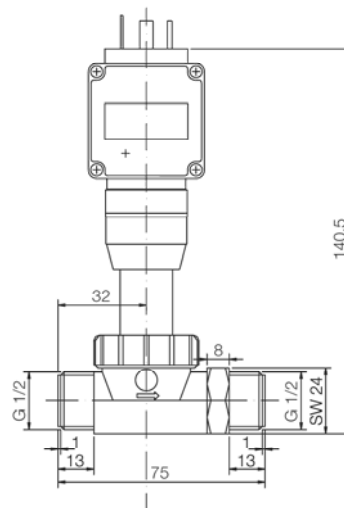

DPL-..Z3 with analogue output and pointer indication

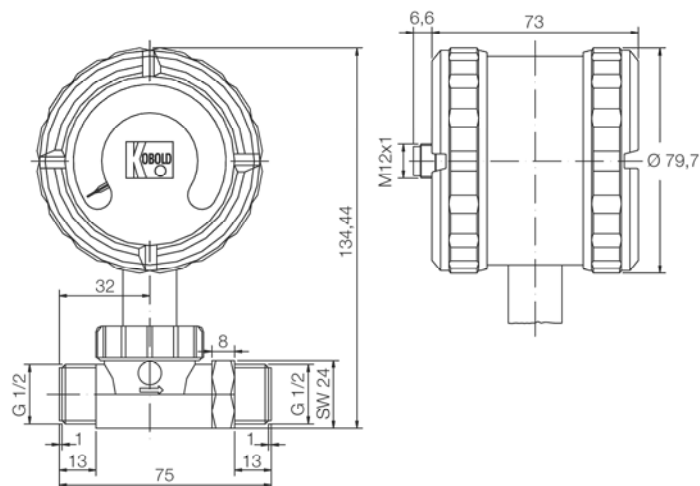

13. Declaration of Conformance

We, Kobold Messring GmbH, Hofheim-Ts, Germany, declare under our sole responsibility that the product:

Low Volume Rotating Vane Flow Meter
model: DPL-1P..., DPL-1V..., DPL-1E...

to which this declaration relates is in conformity with the standards noted below:

EN 50081-2	03/1994
EN 61000-6-2	03/2000
DIN EN 61010-1	03/1994
DIN VDE 0470-1	11/1992

Also the following EWG guidelines are fulfilled:

2006/95/EC	Low Voltage Directive
-------------------	------------------------------

Hofheim, 16. Jan. 2007



H. Peters
General Manager



M. Wenzel
Proxy Holder